
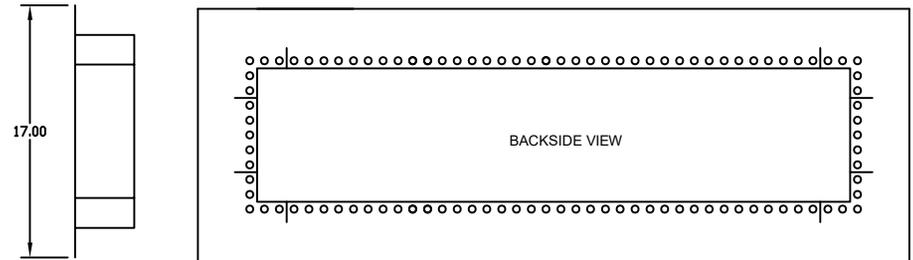
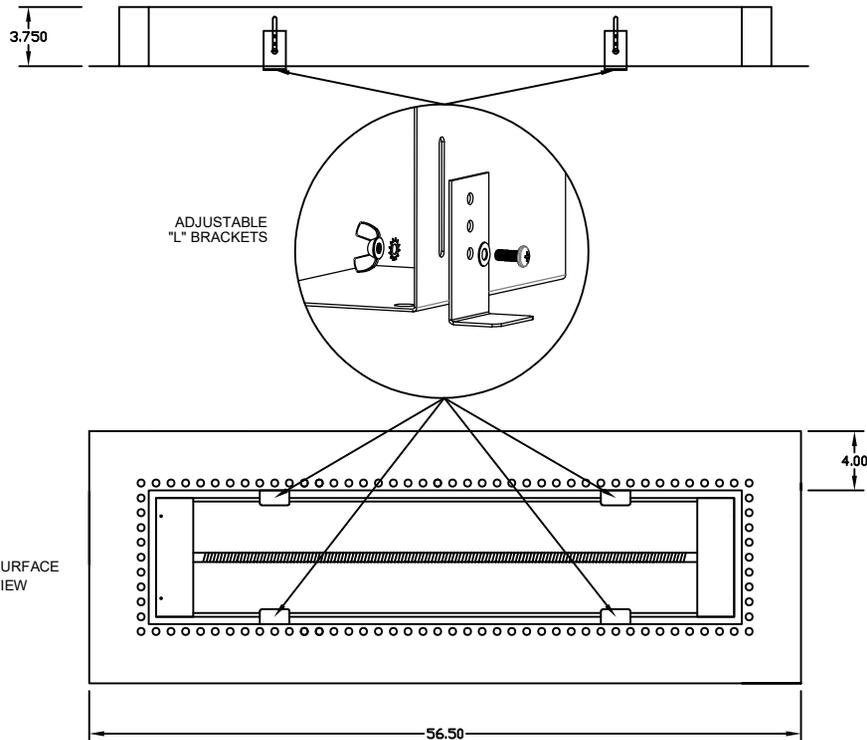
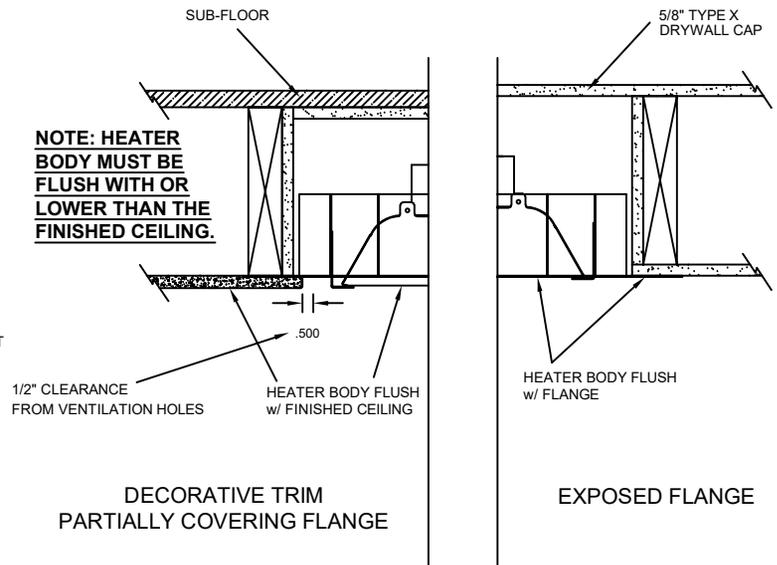


# INSTALLATION TYPES

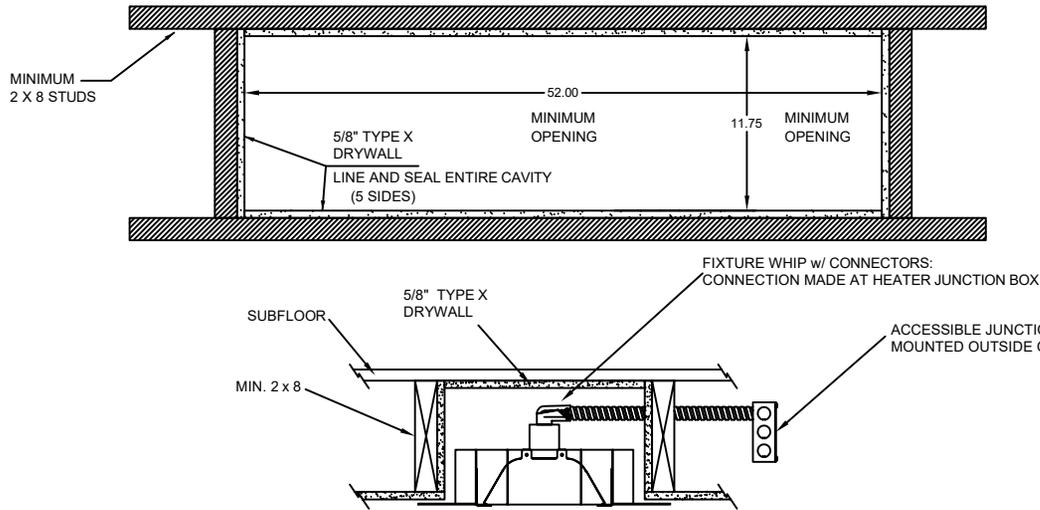

### WARNINGS:

- Do not use Surface Mount Brackets.
- This Frame is **ONLY** to be used on a flat non-sloped ceiling.
- Heater Body must face straight down and be flush with the finished ceiling.
- Frame and Heater cannot be installed on a pitched angle.
- Accessible Junction Box must be installed outside of sealed drywall pocket.
- Must use  $\frac{5}{8}$ " type "X" drywall.
- Must use supplied 4 foot Hi-Temp Fixture Whip and Hi-Temp Ceramic Wire Nuts.
- Please contact factory for longer length Hi-Temp Fixture Whips available for purchase.
- Discard Surface Mounting Brackets provided with Heater and use "L" Brackets.
- Use Licensed Electrician ONLY.

### NOTES:

- Heater suspends (Gravity) by resting on adjustable "L" Brackets in flush mount fixture.
- Mounting holes on Surface Flange to be determined and drilled by Contractor/Installer.
- Coil excess flex into heater cavity.

*After 4 hours of continuous use, a 15 minute cool down period is recommended for maximum heater longevity. See controls brochure for timer options.*

<b>INFRATECH</b> www.infratech.com		Infratech 344 W 157th Street Gardena, CA 90248 Phone: 310-354-1250
ITEM #: 18-2302	MATERIAL: 304 S.S. #4 FINISH	
DESCRIPTION: 48" FLUSH MOUNT TRIM KIT		
NOTES: SUPPLIED w/ HI-TEMP FIXTURE WHIP		
DATE: Aug. 1, 2024	SCALE: N/A	DRAWN BY: MD